



VALVE AND VALVE BOX INSTALLATION

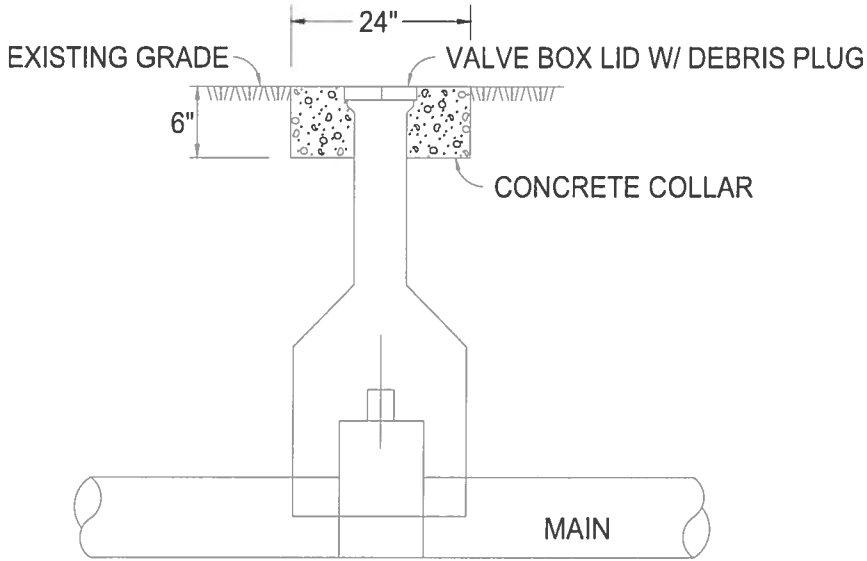

**POLYETHYLENE VALVE INSTALLATION
WITH LOCATOR WIRE (DETAIL # 220)**

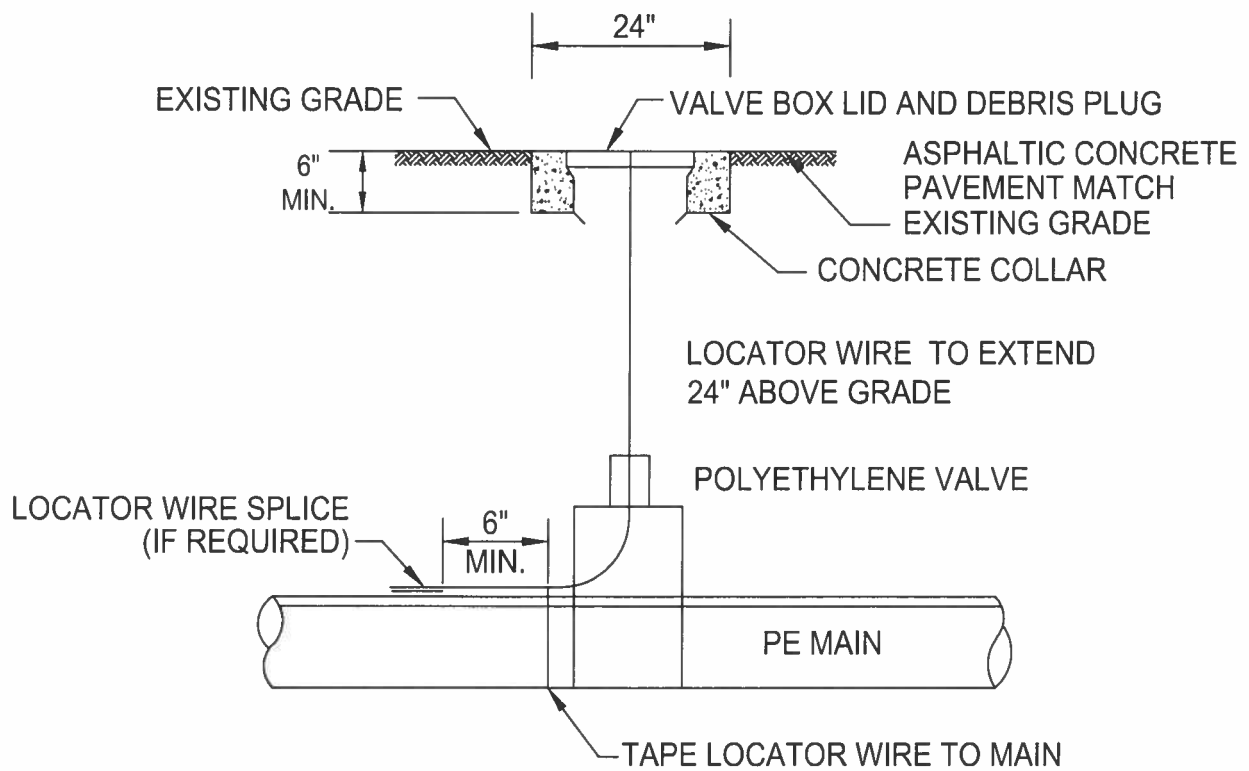

* WIRES SHOULD BE LONG ENOUGH TO EXTEND AT LEAST 2 FEET ABOVE GRADE.